

2. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
● The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

2.1 EXPLODED VIEWS



EXPLODED VIEWS Parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	EAR PAD (HRM-6)	26.00P6-2800	5	HEADBAND ASSY (HRM-6)	12.00P6-2001
1	EAR PAD (HRM-5)	26.00P5-2800	5	HEADBAND ASSY (HRM-5)	12.00P5-2002
2	SP BASE ASSY L (HRM-6)	12.00P6-A000	6	SCREW	33.2035-2101
2	SP BASE ASSY L (HRM-5)	12.00P5-A000	7	SCREW	33.2060-2100
3	SP BASE ASSY R (HRM-6)	12.00P6-A001			
3	SP BASE ASSY R (HRM-5)	12.00P5-A001			
4	JACK ASSY	12.00P6-8000			


* There is no need for the measuring instrument or jigs, when replacing the parts.
* JACK ASSY includes the internal cord.

2.2 PACKING

A

B

C

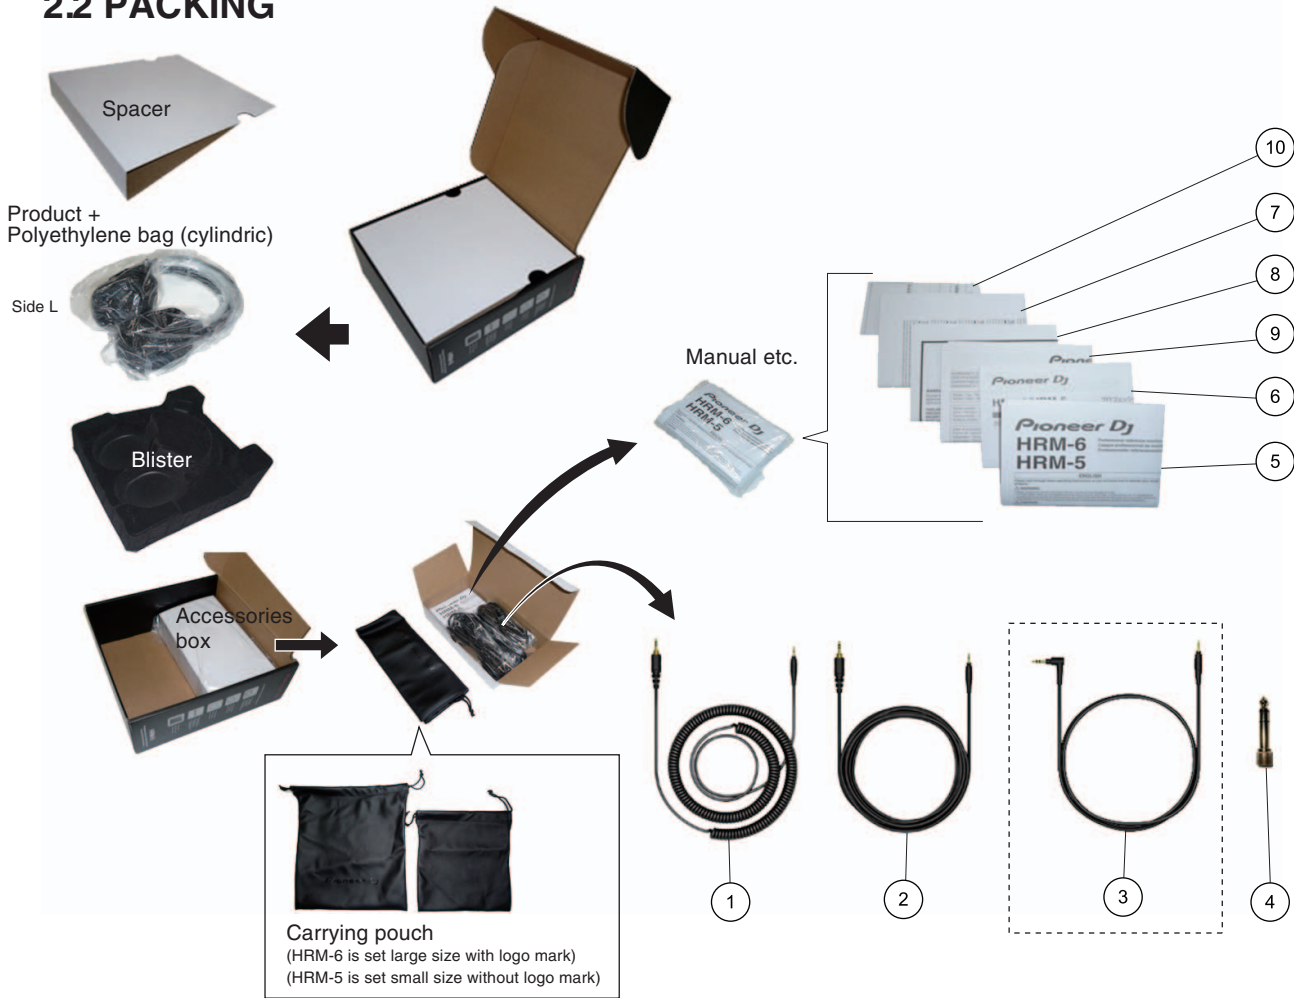

PACKING SECTION Parts List

D

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Coiled cable	07.0040-3204	NSP 6	Manual (Ja/Zhcn)
2	3.0 m Straight cable	07.0040-3206	NSP 7	Caution Sheet
3	1.2m Straight cable (HRM-6 only)	07.0040-3208	NSP 8	Warranty (North america)
4	Plug adapter	WKX1056	NSP 9	Warranty (Europe)
NSP 5	Manual (En/Fr/De/It/Es/Nl/Ru/Pt/Zhtw)		NSP 10	Warranty (Japan)

E

F